



UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 32WHA460E

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

Informacije o proizvodu

Delegirana uredba EU komisije 2019/2013

Informacije	Vrednost	Jedinica
1. Ime ili zaštitni znak isporučioaca:	FOX	
Naziv i adresa isporučioaca::	Vimport doo, Batajnički drum 23, Beograd	
2. Identifikaciona oznaka modela:	32WHA460E	
3. Klasa energetske efikasnosti za Standardni dinamički opseg (SDR)	F	
4. Snaga u uključenom stanju za Standardni dinamički opseg (SDR)	27.0	W
5. Klasa energetske efikasnosti za Veliki dinamički opseg (HDR)		
6. Snaga u uključenom stanju za Visok dinamički opseg (HDR)		W
7. Snaga u isključenom stanju	0.0	W
8. Snaga u stanju pripravnosti	0.5	W
9. Snaga u umrežanom stanju pripravnosti	2.0	W
10. Kategorija elektronskog ekrana	Televizor	
11. Odnos veličina	16 : 9	
12. Rezolucija ekrana (u pikselima)	1366 x 768	piksela
13. Dijagonala ekrana	31.5	inča
14. Dijagonala ekrana	80.0	cm
15. Vidljiva površina ekrana	27.4	dm ²
16. Korišćena tehnologija panela	LCD sa LED	
17. Dostupna Automatska regulacija sjajnosti (ABC)	Ne	
18. Dostupan senzor za prepoznavanje glasa	Ne	
19. Dostupan senzor prisutnosti u prostoriji	Ne	
20. Frekvencija osvežavanja slike	60	Hz
21. Minimalna garantovana raspoloživost ažuriranja softvera i integrisanog softvera uređaja od datuma stavljanja na tržište (do):	3	(u godinama)
22. Minimalna garantovana raspoloživost rezervnih delova (do):	3	(u godinama)
23. Minimalno trajanje opšte garancije koju daje isporučilac (do):	3	(u godinama)
24. Tip napajanja:	Unutrašnje	
25. Spoljašnje napajanje (ako je priloženo uz proizvod, nije standardizovano)	Standardno ime	
	Ulazni napon	V
	Izlazni napon	V
26. Spoljašnje standardizovano napajanje (ako nije priloženo uz proizvod, drugo odgovarajuće napajanje)	Standardno ime	
	Potreban izlazni napon	V
	Potrebna minimalna jačina struje	A
	Potrebna frekvencija struje	Hz

VAŽNA BEZBEDONOSNA UPUTSTVA

UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA. KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ VLAZI ILI KIŠI.

 <p>Ovaj simbol munje u jednakostraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati poklopac (ili zadnju stranu). Unutra nema delova koje korisnik može sam da zameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja.</p>	 <p>Znak uzvika unutar jednakostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.</p>
--	---	---

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

OPREZ

Postoji opasnost od eksplozije ako se baterija nepropisno zameni.

Zamenite postojeću sa samo odgovarajućom vrstom baterije.

Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.

Obezbedite pravilno odlaganje istrošenih baterija.

Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.

Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu.

VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.

Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.

Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.

Nemojte postavljati TV na visok nameštaj (na primer, ormare ili police) bez prethodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.

Ne pokrivajte televizor krpom i ne stavljajte drugi materijal između televizora i nameštaja na kom on stoji.



Sigurna instalacija

 
Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



1. **Pročitajte uputstva**- Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
2. **Sačuvajte uputstva** – Uputstvo za upotrebu treba da se sačuva za buduće potrebe.
3. **Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
4. **Pratite uputstva**- Treba pratiti sva uputstva.




5. **Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
6. **Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač
7. **Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
8. **Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetravanje.
9. **Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
10. **Napajanje** - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. **Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
12. **Zaštita kabla za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještitu stvarima na njemu i njegovom kraju.
13. **Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača.
14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
15. **Uzemljenje spoljne antene** – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. **Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
17. **Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
18. **Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
 - Kabal za struju ili utikač oštećeni.
 - Kada predmeti upadnu ili kada se tečnost prolje po uređaju
 - Kada je aparat izložen kiši
 - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao sto su novine, tkanine, zavese itd.
20. Izvore otvorenog plamena, kao sto su upaljene sveće, ne bi trebalo da stoje na aparatu
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.




UPOZORENJE

 Visok napon se koristi u napajanju ovog uređaja. Ne uklanjajte zadnji poklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.




UPOZORENJE

Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.

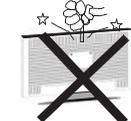

UPOZORENJE

Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikada nemojte prosipati tečnost na TV prijemnik.

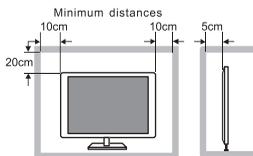

OPREZ

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o minimalnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.



OPREZ

Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.




OPREZ

Ne stavljajte televizor na nestabilno postolje, policu ili sto. Usled pada može doći do ozbiljne povrede lica ili štete na televizoru.



OPREZ

Kada se proizvod ne koristi duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice .

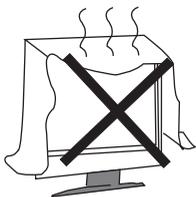

OPREZ

Izbegavajte izlaganje televizora direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne stavljajte kabl za napajanje ispod televizora.






OPREZ



Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Pojedinci treba oprezno da rade sa razbijenim staklom ekrana.



- Postavite TV na stabilnu, ravnu površinu, ostavljajući najmanje 10 cm oko njega i 30 cm između vrha seta i zida ili ormarića. Da biste sprečili da se televizor prevrne kada ga gurnete, postavite ga blizu zida. Umesto da držite gornju stranu televizora kada ga okrećete, trebalo bi da držite donju stranu.

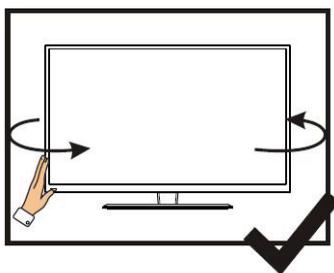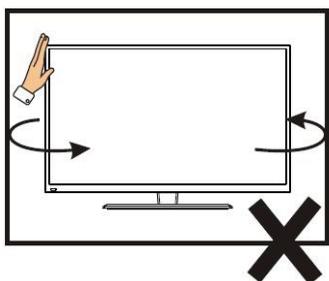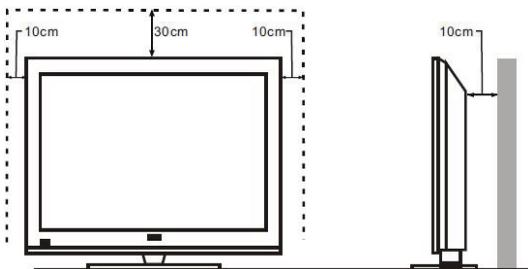

- Izbegavajte rukovanje televizorom samo jednom rukom kada ga podižete; umesto toga, koristite dve ruke.

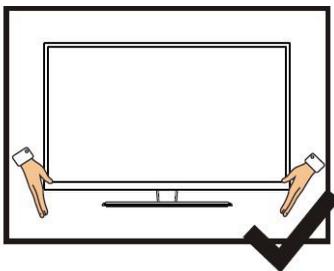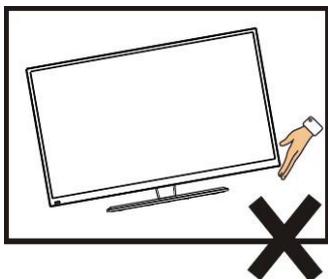

Sadržaj

1. Povezivanje i priprema televizije	2
1.1 Pribori	2
1.2 Instalacija postolja	2
1.3 Tasteri i interfejsi	3
1.4 Daljinski upravljač	4
1.5 Instalacija baterije	5
2. Osnovne operacije	5
2.1 Uključiti / Isključiti (Opiciono)	5
2.2 Podešavanje režima pripravnosti	5
3. Početna stranica	6
4. Tražiti	6
5. Izvor	11
6. Glavni meni	15
7. Manadžment uređaja	16
8. Tehničke specifikacije	20
9. Podržani režimi signala	21
10. Jednostavna rešavanja problema	22

FOX LED TV


1 Priključivanje i priprema TV-a

1.1 Dodatna oprema

- ✧ Uputstvo za korišćenje
- ✧ Daljinsko upravljanje
- ✧ Baterija (UM-4/R03P/AAA)
- ✧ Komplet za montiranje na zid (unapred montiran) (opciono)

1.2 Instalacija postolja

(Molimo pogledajte stvarni objekat za detalje o fizičkoj strukturi.)


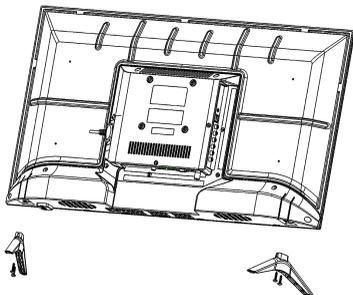


- 1) Postavite TV na mekanu tkaninu ili meke jastuke na sto tako da prednja ploča bude okrenuta nadole.
- 2) Stavite postolje sa donje strane televizora, na predviđeno mesto.
- 3) Zašrafite postolje sa zavrtnjima, a zatim ih zategnite.


FOX LED TV

1.3 Tasteri i interfejsi


Stvarne stavke se koriste kao standard u dizajnu i specifikaciji.

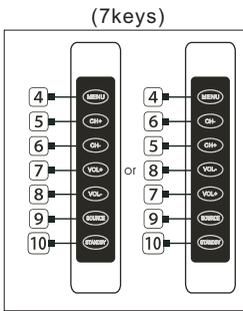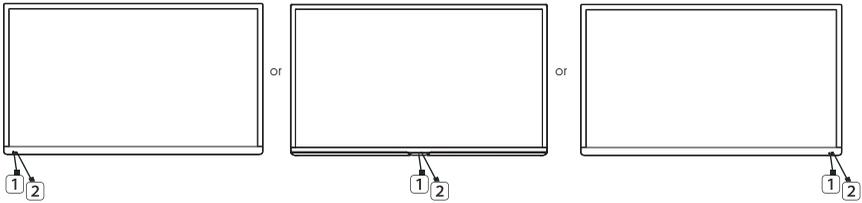

(7keys)

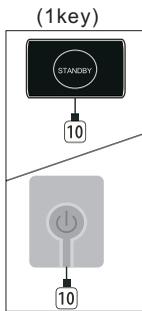


(1key)

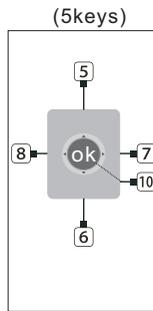

(5keys)

- 1 IR SENZOR
- 2 INDIKATOR NAPAJANJA
- 3 ZVUČNIK
- 4 MENU TASTER
- 5 PROGRAM "+" TASTER
- 6 PROGRAM "-" TASTER
- 7 VOLUME "+" TASTER
- 8 VOLUME "-" TASTER
- 9 SOURCE TASTER
- 10 TASTER PRIPRAVNOSTI
- 11 ULAZ ZA NAPAJANJE

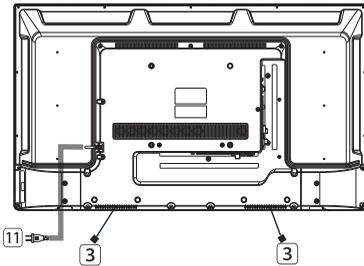

HDMI1 (ARC)	HDMI2	HDMI3	USB2 USB1 5V==500mA	CI EARPHONE
RJ45	OPTICAL	VIDEO	AV IN L R	RF IN (S2) 13V/18V==500mA
				RF IN (T2)

FOX LED TV

1.4 Daljinski upravljač

(Ovo je samo skica, molim vas da se oslonite na fizički primerak.)



1. STANDBY (): Uključiti ili isključiti režim pripravnosti.
2. MUTE: Isključiti zvuk.
3. 0~9: Pritisnuti taster da izaberete kanal.
4. EPG: Ući ili izaći iz EPG-a (Elektronski programski vodič)
5. SOURCE: Izabrati izvor signala.
6. MENU: Ući ili izaći iz menija.
7. : Prikazati informacije o trenutnom videu i zvuku.
8. key: Izbor podešavanja.
9. OK: Potvrditi ili ući.
10. Settings: Ući u meni podešavanja.
11. EXIT: Izaći iz menija ili operacije.
12. RECALL: Vratiti se na prethodni kanal.
13. Prime video: Ući u Prime video.
14. HOME: Ući na početnu stranicu.
15. VOL+: Pojačati zvuk.
VOL- : Smanjiti zvuk.
16. NETFLIX: Ući u aplikaciju Netflix.
17. You Tube: Ući u aplikaciju YouTube.
18. CH ^: Izabrati kanal unapred.
CH v: Izabrati kanal unapred.
19. AUDIO: Izabrati režim audio rada televizora.
20. SUBTITLE: uključiti titlove(samo u DTV režimu rada).
21. TEXT: Ući ili izaći iz teleteksta.
22. ZOOM: Zumirati ili umanjiti.
23. Pritisnuti za reprodukciju.
24. : Brzo premotati unazad.
25. RECORD: Snimanje na USB disk (samo u DTV režimu rada).
26. Brzo premotati unapred.
27. RED: Pristup crvenoj stranici.
28. GREEN: Pristup zelenoj stranici.
29. YELLOW: Pristup žutoj stranici.
30. BLUE: Pristup plavnoj stranici.

FOX LED TV

1.5 Instalacija baterija



- 1 Zadnji poklopac daljinskog upravljača treba da bude otvoren.
- 2 Stavite dve 7# (AAA) 1.5V baterije u sistem.

Uverite se da su baterije pravilno polarizovane.

- 3 Pokrijte zadnji poklopac.

Izvadite baterije iz daljinskog upravljača ako ga neko vreme ne koristite.

Izvršite sledeće provere ako daljinski upravljač ne funkcioniše ispravno.

- Proverite da li je TV u programu.
- Proverite da li je polaritet baterija odgovarajući.
- Proverite da li baterije nisu istrošene.
- Uverite se da je napajanje u ispravnom stanju ili da je kabl za napajanje pravilno povezan.
- Uverite se da u blizini nema neobičnih neonskih ili fluorescentnih svetla.

2 Osnovna operacija

2.1 Uključivanje/isključivanje (opciono)

Povežite kabl za napajanje sa **AC Utičnicu**. Uključite kabl za napajanje u odgovarajuću utičnicu.

Pritisnite **Standby** da uključite TV

Pritisnite **Standby** p onovo da isključite TV.

Beleška: Nemojte odmah ponovo da pritisnete taster standby nakon što isključite TV; umesto toga, sačekajte jedan minut pre nego što ponovo pritisnete standby.

2.2 Podešavanje režima pripravnosti

- Pritisnite  taster da biste uključili TV.
- Pritisnite  taster ponovo da vratite ekran u režim pripravnosti. Indikator napajanja svetli crveno.
- Uverite se da vaš TV nije ostavljen u režimu pripravnosti duži vremenski period.

2.3 Izbor režima unosa signala

Ovaj set sadrži više modova izvora signala; pritisnite taster **Source** više puta da biste izabrali izvor signala.

FOX LED TV

3. Početna stranica

Nakon što završite podešavanje za pokretanje, možete ući u početni interfejs.



Ikone u gornjem levom i desnom uglu predstavljaju neke glavne funkcije koje ovaj sistem pruža, uključujući traženje, podešavanje izvora ulaza, generalno podešavanje, mreža, vreme i ostale funkcije.

4. Tražiti

Kliknite na ikonu  u gornjem levom uglu na početnoj stranici da uđete u funkciju traženja

Ova funkcija se mora koristiti kad ste na mreži.

5. Izvor signala

Metodi ulaska:


1. Kliknite na ikonu  u gornjem levom uglu na početnoj stranici da uđete direktno
2. Kliknite na ikonu [source] na daljiskom da uđete
3. Kliknite na ikonu  na daljiskom da uđete

6. Glavni meni

Izaberite  u gornjem levom uglu da uđete na stranicu podešavanja sistema. Pritisnite ikone [/▼]/ ◀/▶] da izaberete opciju, pritisnite [0k] da potvrdite izbor.

slika

Pritisnite na [/▼] da izaberete opciju, pritisnite [0k] da potvrdite izbor, pritisnite na [/▼] da izaberete parametre.

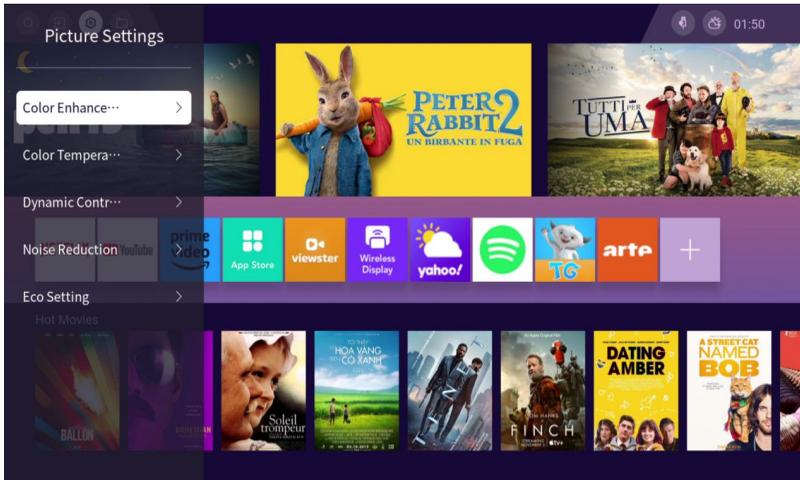



Opis funkcije:

	Podržani režim rada	Opis
Poboljšanje boje	UKLJUČENO->ISKLJUČENO	Da li je poboljšanje boje omogućeno
Temperature boje	Normalno, toplo, hladno	Tipovi temperatura boje
Dinamična kontrast	UKLJUČENO->ISKLJUČENO	Kontrast dinamičkih slika
Smanjenje buke	Uključeno->Nisko->Srednje->Visoko->Auto	Podešavanje smanjenja buka
Eco podešavanje	UKLJUČENO->ISKLJUČENO	Omogućiti eco podešavanje ili ne

FOX LED TV

Zvuk

Kliknite na [OK] da uđete na stranicu podešavanja zvuka.

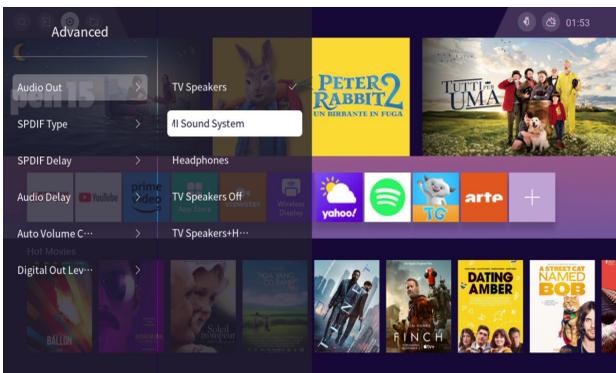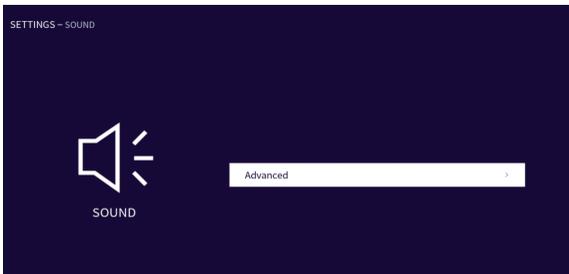

Opis funkcije:

	Podržani režim	Opis
Audio izlaz	TV Zvučnici -> HDMI Zvučni sistem -> Slušalice -> TV Zvučnici ISKLJUNENO->TV Zvučnici + slušalice	Vrste audio izlaza
SPDIF Tip	PCM->Auto->Režim zaobilaženje	SPDIF Tip
SPDIF kašnjenje	0-250	SPDIF Kašnjenje
Audio kašnjenje	0-250	Nivo audio kašnjenja
Automatska kontrola jačine zvuka	UKLJUČENO->ISKLJUČENO	Automatska kontrola jačine zvuka
Nivelisanje digitalnog zvuka	Više->Srednje->Manje	Nivelisanje digitalnog izlaza zvuka


FOX LED TV

Mreža

Postoji dve metode za ulazak:

- (1) Prvi metod: Kliknite na ikonu  u interfejsu [Home] da uđete.
- (2) Kliknite na ikonu  u interfejsu [Home] da uđete u interfejs podešavanja gde možete naći ikonu .


Pritisnite na ikonu  da izaberete opciju, pritisnite [OK] da potvrdite izbor.

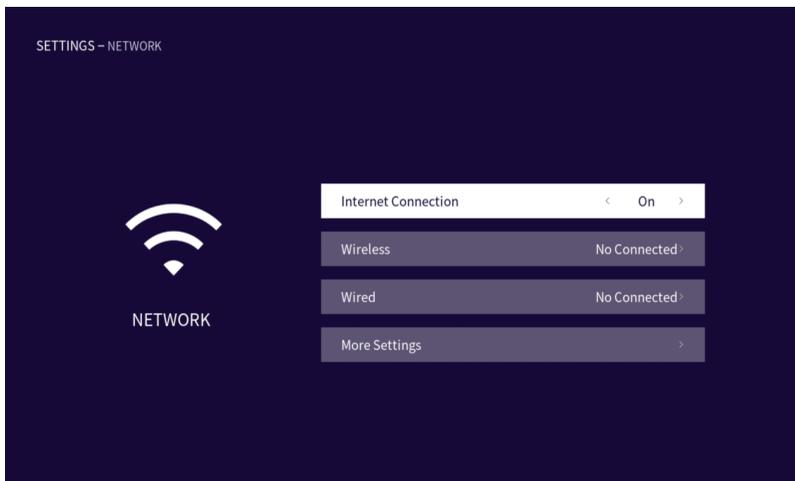

Opis funkcije:

	Opis
Povezivanje interneta	Povezivanje
Bežično	Bežični internet
Žično	Žični internet
Više podešavanja	Više podešavanja

Kanal

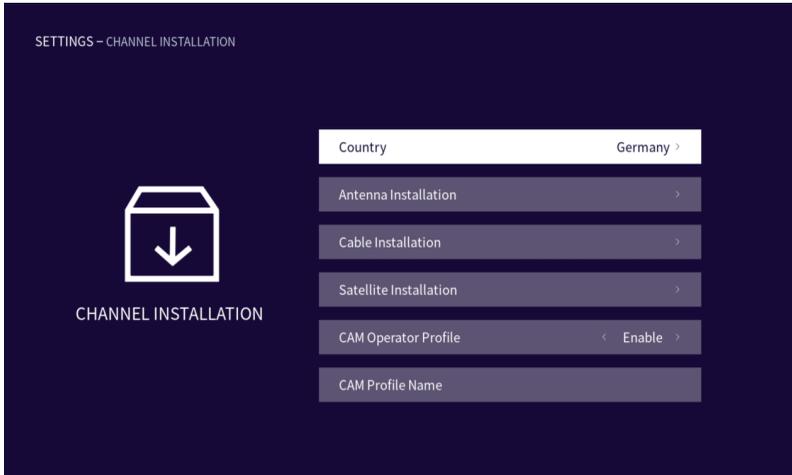


Pritisnite na ikonu [▲/▼] da izaberete opciju, pritisnite [OK] da uđete u podmeni.

Opis funkcije:

	Opis
Zemlja	Izbor zemalja
Instalacija antene	Podešavaja vezana za instalaciju zemaljske antene
Instalacija kabla	Podešavaja vezana za instalaciju kabla
Instalacija satelita	Podešavaja vezana za instalaciju satelita
Profil operatora CAM	Rad sa CAM modulom
Naziv CAM profila	Naziv CAM profila Može da se popuni samo kad je "Profil CAM operatora" "omogućen"

Sistem

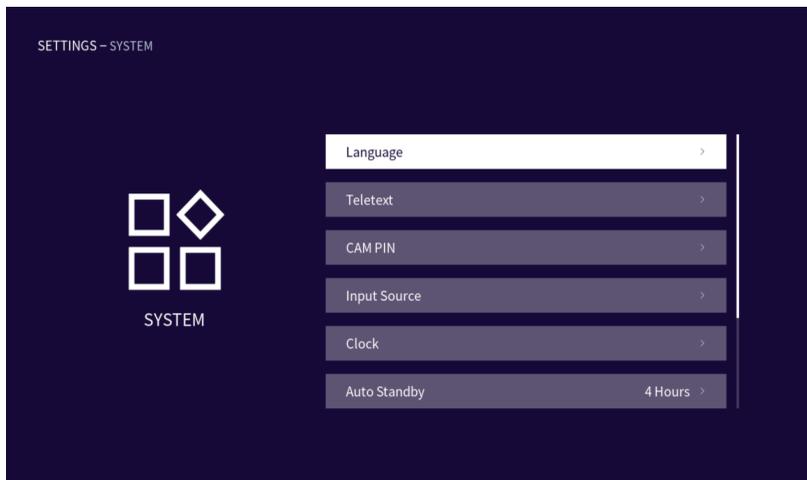

Opis funkcije:

	Podržani režim	Opis
Jezik	Podešavanja vezana za jezik	
Teletekst	Podešavanja vezana za teletekst	
CAM PIN	Podešavanja vezana za CAM PIN	
Izvor ulaza	Podešavanja vezana za izvor ulaza	
Sat	Podešavanja vezana za sat	
Automatski režim pripravnosti	isključeno->4sati->6sati->8sati	Automatski režim pripravnosti
Čuvar ekrana	Podešavanja vezana za čuvar ekrana	
Lokacija	Početna stranica->prodavnica	Izbor režima rada
Uključiti	UKLJUČENO->ISKLJUČENO	Brzo uključiti

FOX LED TV


Režim roditeljska kontrola

Svaki ulazak treba šifru. Podrazumevana šifra je 1234.

Šifre administratora je 0413, koji se može koristi gde god je potrebna šifra.




Slika ispod predstavlja uspešan ulaz.

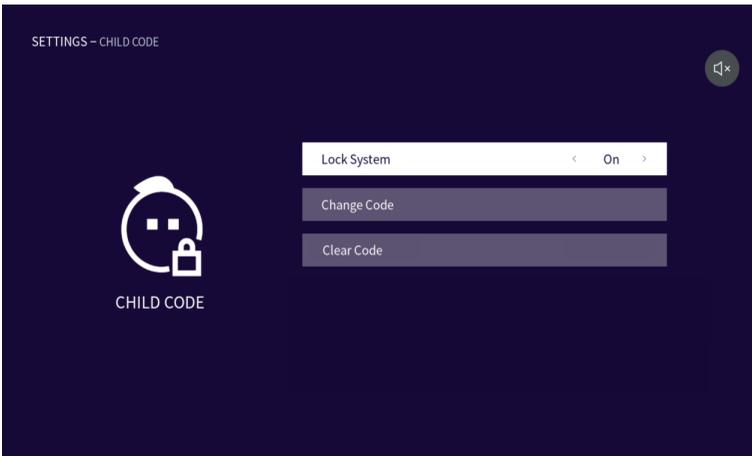

Opis funkcije:

	Podržani režim	Opis
Sistem zaključavanja	UKLJUČENO->ISKLUČENO	Hoćete li da postavite šifru?
Promena šifre	Promena šifre	
Brisanje šifre	Brisanje šifre	

Povezivanje

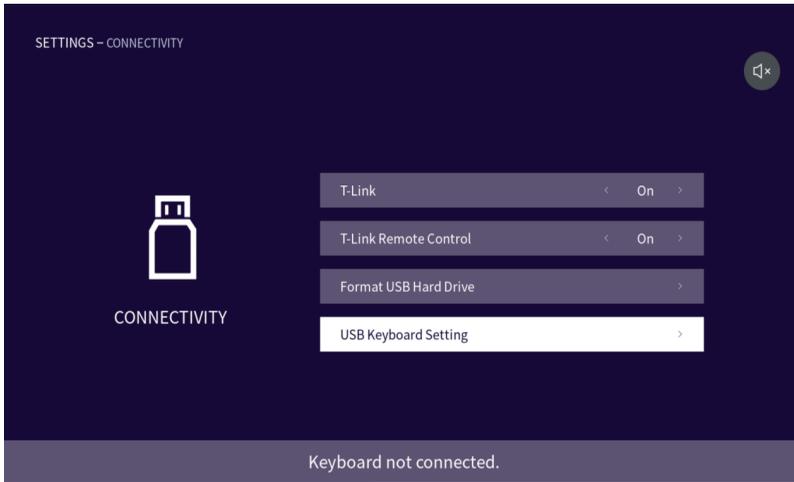


Opis funkcije:

	Podržani režim		Opis
T-Link	UKLJUČENO->ISKLJUČENO		T-Link
T-Link daljinski upravljač	UKLJUČENO->ISKLJUČENO	Efektivno samo kad 'T-Link' je 'UKLJUČENO'	Prebacivanje CEC funkcije
Format USB Hard disk	Format USB Hard disk		
Podешavanje USB tastature	Podешavanje USB tastature		

Univerzalni pristup

Pritisnite na ikonu [▲/▼] da promenite opcije, pritisnite [OK] da uđete u podmeni.

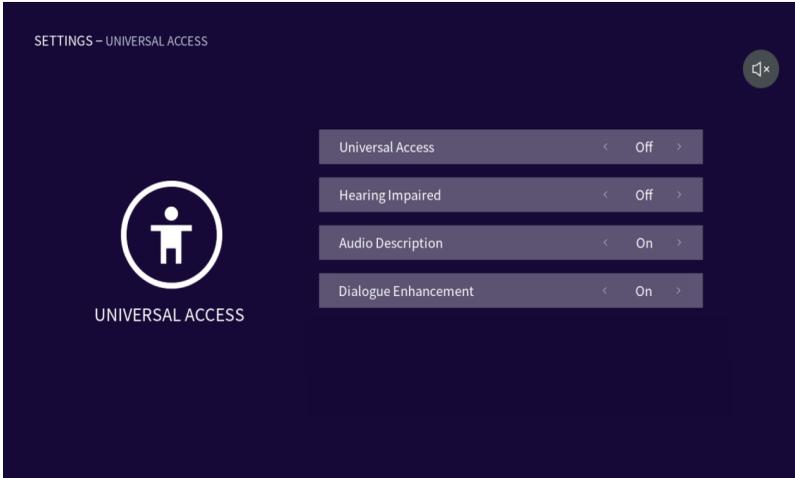


Opis funkcije:

	Podržani režim	Opis
Univerzalni pristup	UKLJUČENO->ISKLJUČENO	Pružati pristupačan pristup telekomunikacijama za svakoga
Oštećenje sluha	UKLJUČENO->ISKLJUČENO	Za osobe sa oštećenim sluhom
Opis audio	UKLJUČENO->ISKLJUČENO	Opis audio
Poboljšanje dijaloga	UKLJUČENO->ISKLJUČENO	Poboljšanje dijaloga

O televiziji

Pritisnite na ikonu [▲/▼] da izaberete opciju, pritisnite [OK] da potvrdite izbor.

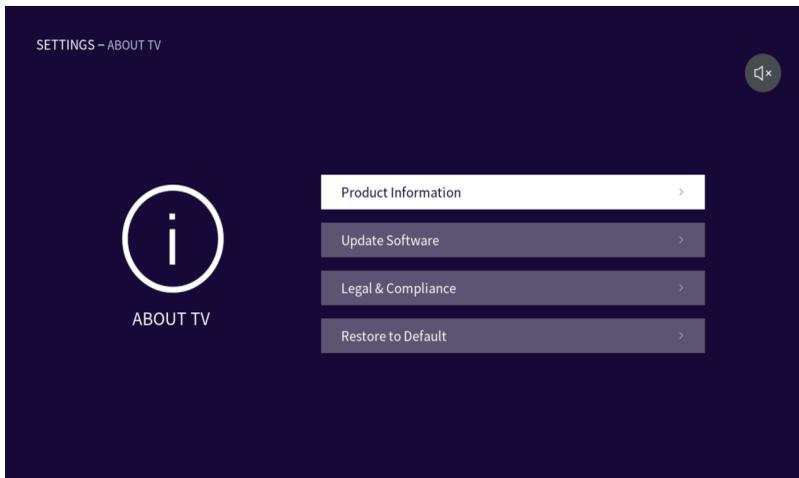

Opis funkcije:

	Opis
Informacije o proizvodu	Informacije o ovom proizvodu
Ažurirajte softver	Ažurirajte softver
U skladu sa pravnim propisima	U skladu sa pravnim propisima
Vratiti na podrazumevano	Vratiti na podrazumevano

FOX LED TV

7. USB uređaj

Metodi ulaska:

1. Na početnoj stranici, kliknite na ikonu  u gornjem levom uglu da uđete
2. Kliknite na ikonu 'Source' na daljinskom da uđete na stranicu izvora ulaza,


izaberite opciju 'USB'



Izaberite uređaj



Klasifikacija dokumenata

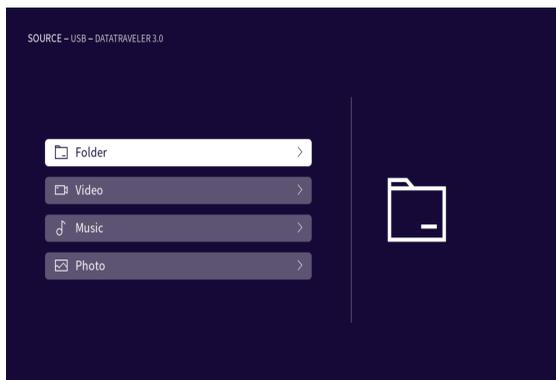

Fascikla

Pritisnite na ikonu  da izaberete opciju, pritisnite [OK] da pogledate sadržaj opcije.

FOX LED TV

Video

Kliknite na video fajl da uđete u interfejs reprodukcije video kako je prikazan ispod. Pritisnite na ikone [◀] i [▶] da pomerite kursor i izvršite različite operacije prema uputstvima.




Opis ikona:

Ikone	Opis
	Brzo premotati unazad
	Brzo premotati unapred
	Prethodni video
	Pustiti ili pauzirati
	Sledeći video
	Lista
	Redosled

Muzika

Kliknite na fajl muzike da uđete u interfejs reprodukcije muzike kako je prikazan ispod. Pritisnite na ikone [◀] i [▶] da pomerite kursor i izvršite različite operacije prema uputstvima.

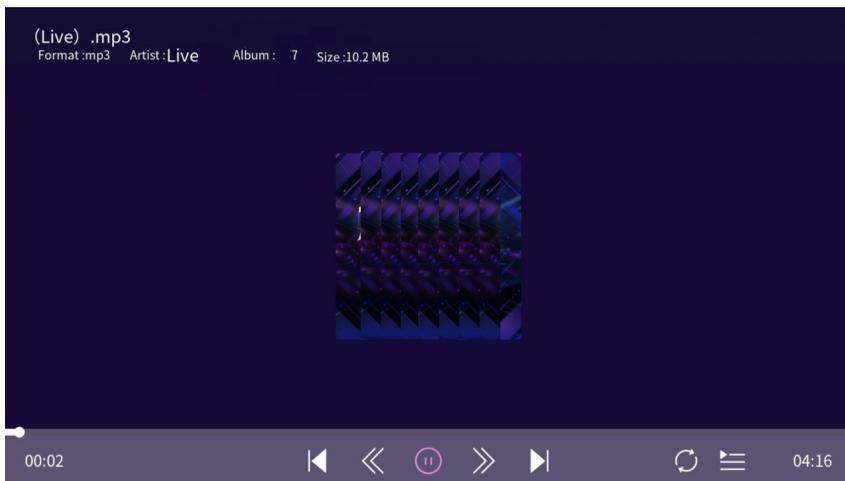

Opis ikona:

Ikone	Opis
	Brzo premotati unazad
	Brzo premotati unapred
	Prethodna numera
	Pustiti ili pauzirati
	Sledeća numera
	Lista
	Redosled

FOX LED TV

Slika

Kliknite na slike da uđete u interfejs reprodukcije slike kako je prikazan ispod, pritisnite na ikone [◀] i [▶] da pomerite kursor i izvršite operacije prema uputstvima.

Funkcije ikona na desnu stranu interfejsa od vrha do dna su: informacija o slikama, umanjiti, zumirati, podešavanje slika.



Opis ikona:

Ikone	Opis
	Rotirati za 90 stepni suprotno od kazaljke na satu
	Rotirati za 90 stepeni u smeru kazaljke na satu
	Prethodna slika
	Pustiti ili pauzirati
	Sledeća slika
	Zumirati
	Umanjiti
	Redosled

FOX LED TV

8. Tehničke specifikacije

Model proizvoda	32WHA460E	
Veličina ekrana	32" dijagonala	
Format prikaza	16:9	
Napajanje	AC 100-240V~,50/60Hz	
Potrošnja električne energije	60W	
TV Sistem	PAL B/G D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 opcija) (U nekim zemljama ili područjima nema DVB-C signala.)	
Izlazna audio snaga (interna)	8WX2	
Ulazni terminal	Ulaz antene	x 2 (S2 opcija)
	USB ulaz	x 2
	HDMI ulaz	x 3
	VGA ulaz	NO
	PC AUDIO Ulaz	NO
	Audio Ulaz (L/R)	x 1
	Video Ulaz	x 1
	YPbPr Ulaz	NO
	RJ45 Ulaz	x 1
	CI kartica In	x 1
	SCART In/Izlaz	NO
	DC In (12V)	NO
	PORT ZA KARTICU	NO
Izlazni terminal	Slušalice	x 1
	Audio Linija Izvan (L/R)	NO
	Video izlaz	NO
	Optičko	x 1
	Koaksijalni izlaz	NO
Radna temperatura	0°C~40°C	
Radna vlažnost	20% ~ 80% bez kondenzacije	

Zabeleška: Gore prikazane specifikacije mogu da se promene bez prethodne obavesti radi poboljšanja kvaliteta.



Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories.

FOX LED TV

9. Podrška

A. HDMI režim

Rezolucija	Horizontalna frekvencija (Khz)	Vertikalna frekvencija (Hz)
480p	31.468	59.94
576p	31.25	50.00
720P	45.00	60.00
1080i	33.75	60.00
1080P(1920x1080)	67.50	60.00

-Kada signal koji prima ekran pređe dopušteni raspon, na ekranu će se pojaviti poruka upozorenja.

-Možete da potvrdite format ulaznog signala na ekranu.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

10. Jednostavno otklanjanje poteškoća

Ako ekran pokvari ili se njegove performanse drastično promene, proverite TV u skladu sa smernicama u nastavku. Ne zaboravite da pregledate periferne uređaje kako biste identifikovali koren problema.

Simptom	Rešenje
Napajanje se ne može aktivirati. (Indikator napajanja ne svetli.)	-Potvrdite da su oba kraja kabla za napajanje pravilno uključena u utičnicu i da li je zidna utičnica funkcionalna.
Prikazuje se poruka Nema ulaznog signala.	- Proverite da li je signalna linija ispravno povezana. -Potvrdite da su relevantni periferni uređaji uključeni. -Uverite se da izabrani ulaz odgovara ulaznom signalu.
Daljinski upravljač ne radi ispravno.	-Proverite da baterije nisu istrošene. (Koristite novu bateriju.) -Potvrdite da daljinski upravljač radi u svom dometu. - Uverite se da je daljinski upravljač usmeren ka prozoru IR senzora ekrana. - Uverite se da nema prepreka između daljinskog upravljača i IR senzora.
Na ekranu se nalaze trepćuće tačke ili pruge.	- Uverite se da nema emisija (VN žice ili neonske sijalice) ili drugih potencijalnih izvora smetnji.
Boja ili kvalitet slike se pogoršavaju.	- Proverite da li su sva video podešavanja, kao što su osvetljenost, kontrast i boja, pravilno podešena. -Za dodatne informacije o video postavkama, pogledajte OSD funkcije poglavlja 2.
Položaj i veličina ekrana su netačni.	-Potvrdite da su pozicija i veličina ekrana na odgovarajući način.
Slika ili boja su netačne.	- Proverite da li je signalna linija ispravno povezana. -Kada ste povezani sa računarnom, možete da promenite rezoluciju računara da biste dobili odgovarajuću sliku. Disparitet u izlaznom signalu računara može uticati na prikaz slike.
Prikazana poruka upozorenja.	- Proverite da li je ulazna linija signala na odgovarajući način obezbeđena. -Izaberite odgovarajući ulazni signal. -Pogledajte Podržani režimi signala u poglavlju 4 za dodatne



USER MANUAL

LED Television Model: 32WHA460E

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<h3>CAUTION</h3> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.



5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths,curtains,etc.
 No naked flame sources, such as lighted candles, should be placed on the apparatus.
 The apparatus shall be connected to mains socket outlet with a protective earthing connection.
 The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.



Warning

High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

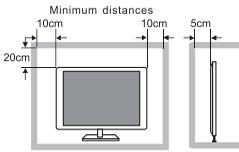

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

Heat built up can reduce the service life of your television, and can also be dangerous.



Caution

Never stand on, lean on, push suddenly the product or its stand.

You should pay special attention to children.



Caution


Do not place the main unit on an unstable cart stand, shelf or table.

Serious injury to an individual, and damage to the television, may result should it fall.



Caution

When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

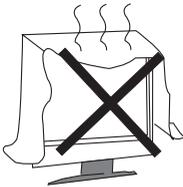

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.




Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force.



Individuals should exercise caution when dealing with broken glass should the panel break.





- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the wall or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

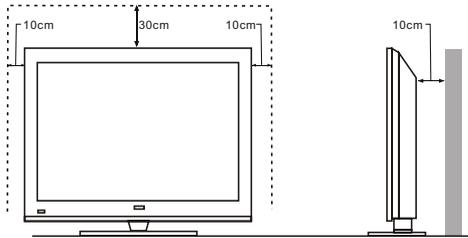

- When you turning the TV set, do not hold the top side of the TV set, you should hold the bottom side.

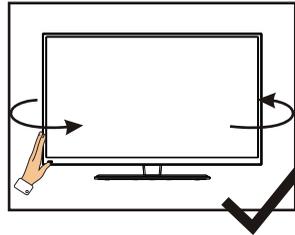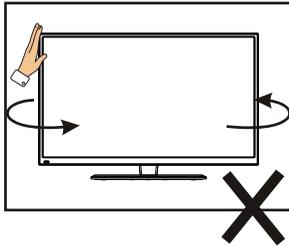

- When you lifting the TV set, do not use one hand to handle it, you should lift the TV set by two hands.

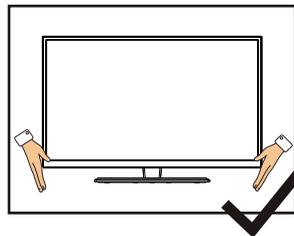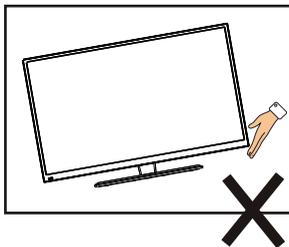

LED COLOR TV

CONTENTS

1. Connection and Preparation of TV.....	2
1.1 Accessories	2
1.2 Installation of Stand.....	2
1.3 Keys and Interfaces.....	3
1.4 Remote Control.....	4
1.5 Installation of Batteries.....	5
2. Basic Operation.....	5
2.1 Power ON/Off(optional).....	5
2.2 Setting of Standby Mode	5
3. Home.....	6
4. search for	7
5. source.....	7
6. Main Menu	8
7. Equipment management	16
8. Technical Specification	20
9. Supported Signal Modes.....	21
10. Simple Troubleshooting	22

LED COLOR TV


1.Connection and Preparation of TV

1.1 Accessories

- ★ User Manual
- ★ Remote Control
- ★ Battery(UM-4/R03P/AAA)
- ★ Wall Mount Kit (Pre-assembled)(Optional)

1.2 Installation of Stand

(For the physical structure, please refer to the real object)




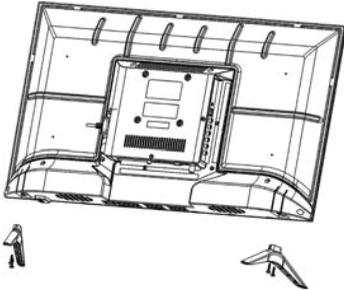


- ① Place the TV with the front panel facing downwards on the soft cloth or soft pads on a desk.
- ② Insert the stand into the bottom socket of the TV.
- ③ Insert the screws into the sockets and tighten them.


LED COLOR TV

1.3 Keys and Interfaces

The design and specification takes actual products as the standard

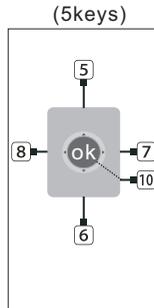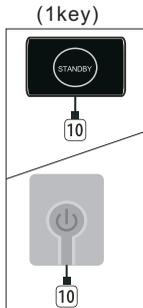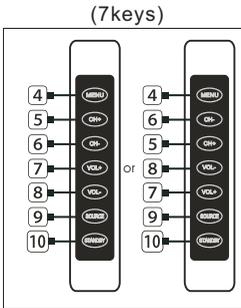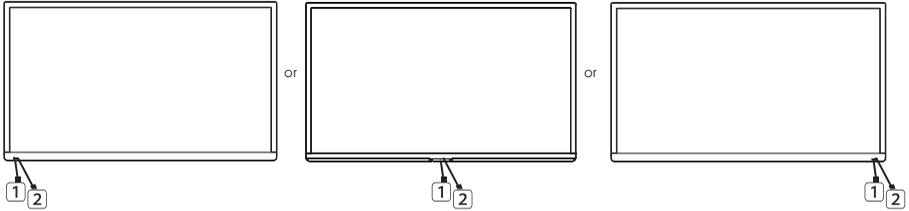

1. REMOTE SENSOR WINDOW
2. POWER INDICATOR
3. SPEAKER
4. MENU KEY
5. PROGRAM “+” KEY
6. PROGRAM “-” KEY
7. VOLUME “+” KEY
8. VOLUME “-” KEY
9. SOURCE KEY
10. STANDBYKEY
11. POWERPLUG INPUT

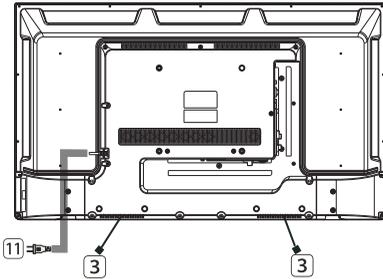

HDMI1 (ARC)	HDMI2	HDMI3	USB2 USB1 5V==500mA	CI EARPHONE
RJ45	OPTICAL	VIDEO	AV IN L R	RF IN (S2) 13V/18V==500mA
				RF IN (T2)

LED COLOR TV

1.4 Remote Control

(Here is only the sketch, please in kind prevail)



1. STANDBY() : Standby turn on and off.
2. MUTE: Mute sound.
3. 0~9 : Continue to press the keys to select a channel.
4. EPG:Enter or exit EPG(Electronic Program .Guide)
5. SOURCE: Select the signal source.
6. MENU:Enter or exit menu.
7. :Display the information of current video and audio.
8. Key:The menu item selection.
9. OK: Confirm or enter.
10. Settings:Enter the settings menu.
11. EXIT : Exit menu or operation.
12. RECALL:Return to previous channel.
13. Prime video:Enter to Prime video.
14. HOME:Enter to homepage.
15. VOL+ : Increase the volume.
VOL- : Decrease the volume.
- 16.NFTFLIX:Enter Netflix APP.
- 17.YouTube:Enter YouTube APP.
18. CH \wedge : Select the channel forward.
CH \vee : Select the channel backward.
19. AUDIO: Select TV audio mode.
- 20.SUBTITLE:DTV mode select subtitle mode.
21. TEXT: Enter or exit teletext.
22. ZOOM:Zoom in or out the current.
23. :Pressone time to pause,press again to playback.
24. :Fast Backward
25. RECORD:DTV mode record data USB disk.
26. :Fast Forward.
27. RED: Access the red item or page.
28. BLUE: Access the blue item or page.
29. GREEN: Access the green item or page.
30. YELLOW:Access the yellow item or page.

LED COLOR TV

1.5 Installation of Batteries

(Here is only the sketch, please in kind prevail)



- ① Open the back lid of the remote control.
- ② Install two 7#(AAA)1.5V batteries.
Ensure the correct polarity of the batteries.
- ③ Cover the back lid.
Please take out of the batteries from the remote control for long time of no use.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries are not drained.
- Check the power supply is normal or the power cord is correctly connected.
- Check there are no special fluorescent light or neon light around.

2. Basic Operation

2.1 Power ON/OFF(Optional)

- Connect the power cord to the **AC input**. Insert the power cord into the appropriate socket.
- Press the **Power switch** to switch on the TV, then press **Power** button to turn on the unit.
- Press the **Power switch** again to switch off the TV.

Note: After switch off the TV, please don't immediately re-open the power switch, should be delayed one minute more to re-open the power switch.

2.2 Setting of Standby Mode

- Press () button to turn on the unit.
- Press () button again to return the display to standby mode. The power indicator turns red.
- Be sure not to set your TV in standby mode for a long period of time.

LED COLOR TV

3. HOME

After completing the startup wizard settings, you can enter the home interface.



The     icons in the upper

left and right corners represent some of the main user functions provided by this system, including search, input source settings, general settings, network, weather, and other functions.

4. search for

Click on the  icon in the top left corner of the Home interface to enter the resource search function

This function needs to be used when connected to the internet

5. Source

Entry method

1. Click the  icon in the upper left corner of the [home] directory to enter
2. Click the [source] button on the remote control to enter
3. Click the [▲] button on the remote control to enter

Note: Apps link and input source are subject to detail order, above photo just for your reference.


LED COLOR TV

6. main menu

Select the  button in the upper left corner to enter the system settings page. Press [▲/▼]/ ◀/▶] Button to select an option, press [OK] to confirm the option.

Picture

Press the [▲/▼] button to select an option, press [OK] to confirm the selection, and press the [▲/▼] button to select paramters.

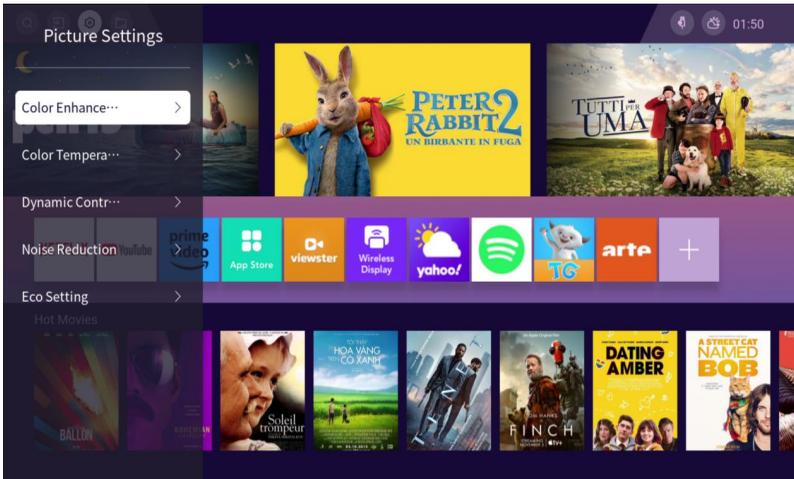



Function Description:

project	Support mode	Description
Color Enhancement	ON->OFF	Is color enhancement enabled
Color Temperature	Normal、Warm、Cool	Color Temperature Type
Dynamic Contrast	ON->OFF	Image dynamic contrast
Noise Reduction	OFF->LOW->Middle->High->Auto	Noise reduction settings
Eco Setting	ON->OFF	Whether to enable ecological settings

LED COLOR TV

Sound

Click [OK] to enter the Sound module page.

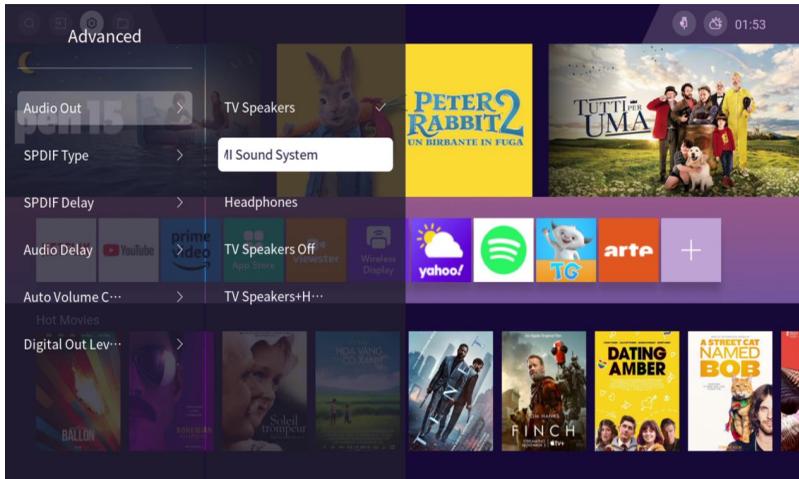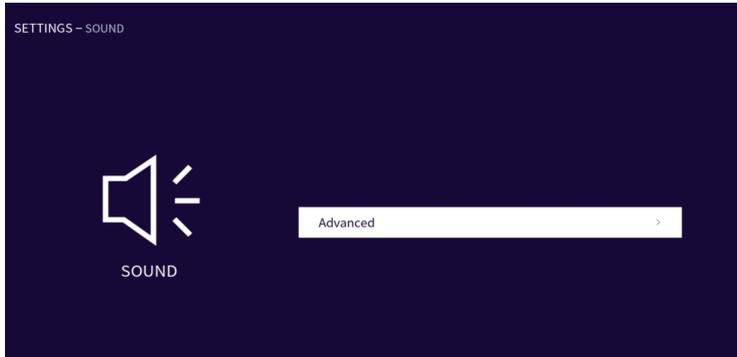

Function Description:

project	Support mode	Description
Audio Out	TV Speakers->HDMI Sound System->Headphones->TV Speakers OFF->TV Speakers+headphones	Audio output channel
SPDIF Type	PCM->Auto->By Pass Mode	SPDIF Type
SPDIF Delay	0-250	SPDIF Delay
Audio Delay	0-250	Audio latency level
Auto Volume Control	ON->OFF	Auto Volume Control
Digital Out Levelling	More->Medium->Less	Digital Out Levelling

LED COLOR TV

Network


There are two ways to enter:

(1) First method: Click the  icon on the [Home] interface to enter.

(2) Click the  icon on the [Home] interface to enter the settings interface,

where you can find the  icon

Press the [▲/▼] buttons to select an option, and press [OK] to confirm the selection.

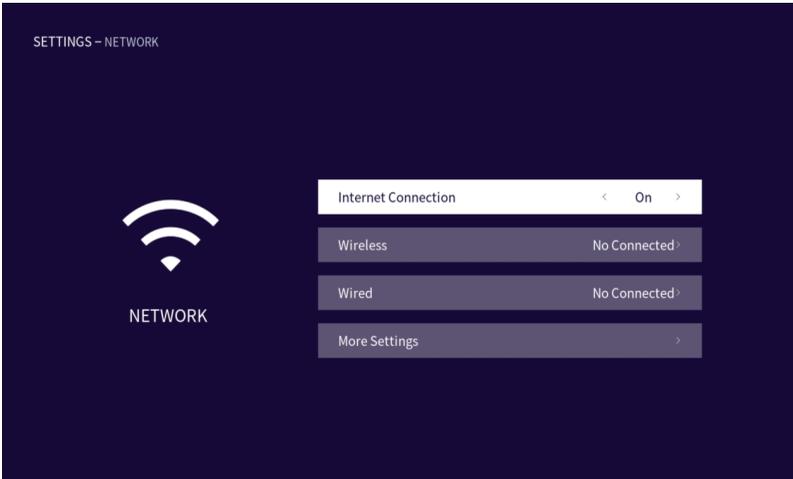


Function Description:

project	Description
Internet Connection	Internet switch
Wireless	wireless network
Wired	Wired network
More Settings	More Settings

LED COLOR TV

Channel

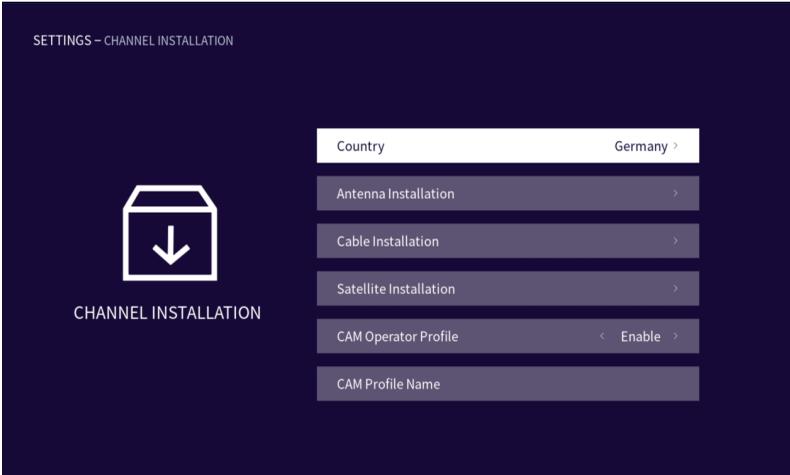


Press the [▲/▼] buttons to select an option, and press [OK] to enter the submenu
Function Description:

project	Description
Country	Country selection
Antenna Installation	Related settings for antenna channels
Cable Installation	Related settings for Cable channels
Satellite Installation	Related settings for Satellite Installation
CAM Operator Profile	CAM Operator Profile
CAM Profile Name	CAM Profile Name Can only be filled in when “CAM Operator Profile” is “enabled”

LED COLOR TV

System

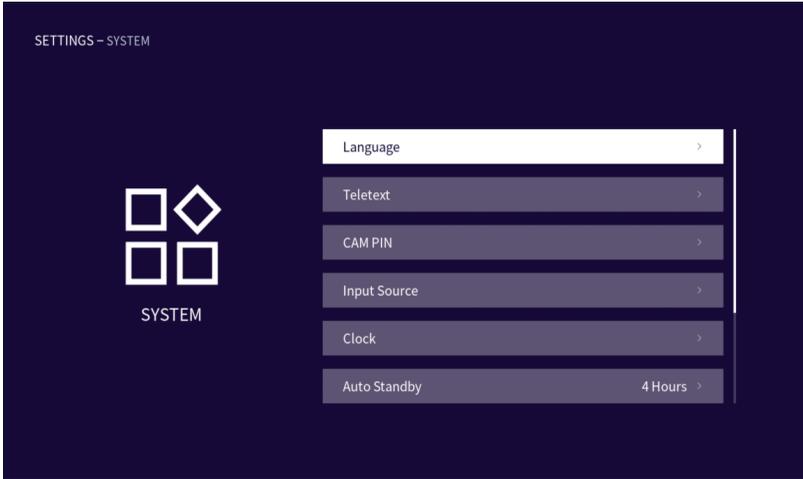

Function Description:

project	Support mode	Description
Language		Language related settings
Teletext		Teletext related settings
CAM PIN		CAM PIN related settings
Input Source		Input Source related settings
Clock		Clock related settings
Auto Standby	Off->4Hours->6Hours->8Hours	Auto Standby
Screen Saver		Screen Saver Settings
Location	Home->shop	Equipment location
Instant Power-On	ON->OFF	Instant Power-On

LED COLOR TV


Child Code

Each entry requires a password, with the default password being '1234'.

The administrator password is "0413" and can be used wherever a password is required.



The following figure represents successful input.

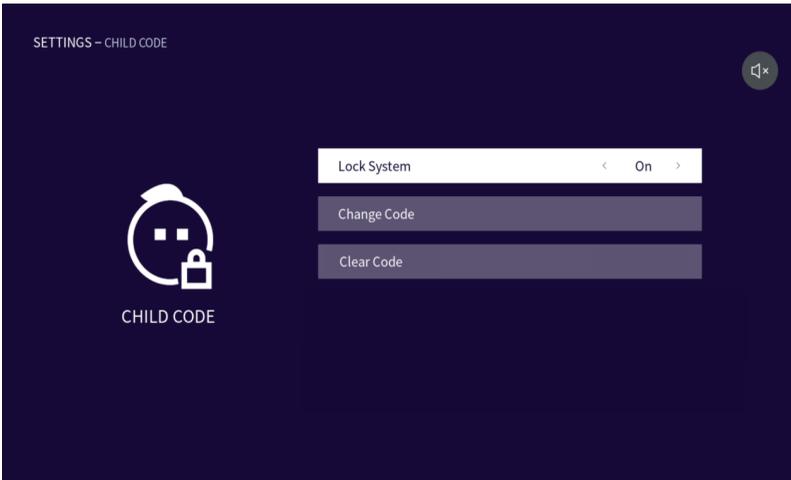


Function Description:

project	Support mode	Description
Lock System	ON->OFF	Do you want to set a password
Change Code		Change Code
Clear Code		Clear Code

LED COLOR TV

Connectivity

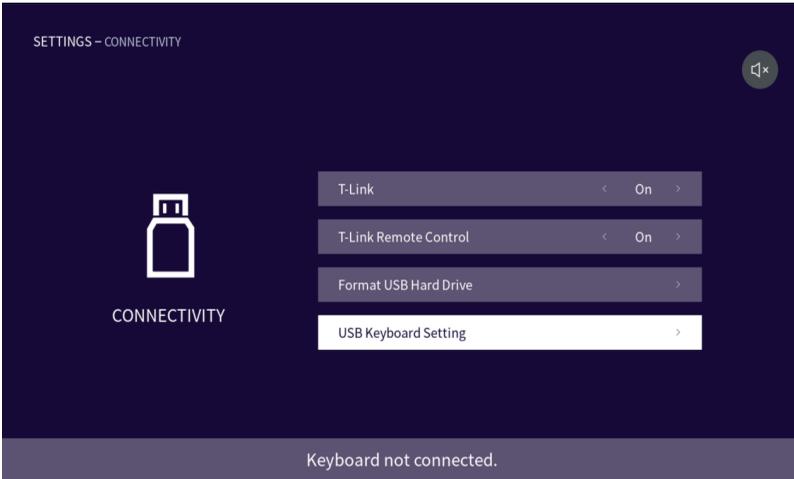


Function Description:

project	Support mode		Description
T-Link	ON->OFF		T-Link
T-Link Remote Control	ON->OFF	Only effective when 'T-Link' is 'ON'	CEC function switch
Format USB Hard Drive	Format USB Hard Drive		
USB Keyboard Setting	USB Keyboard Setting		

LED COLOR TV

Universal Access

Press the [▲/▼] buttons to change options, and press [OK] to enter the submenu.

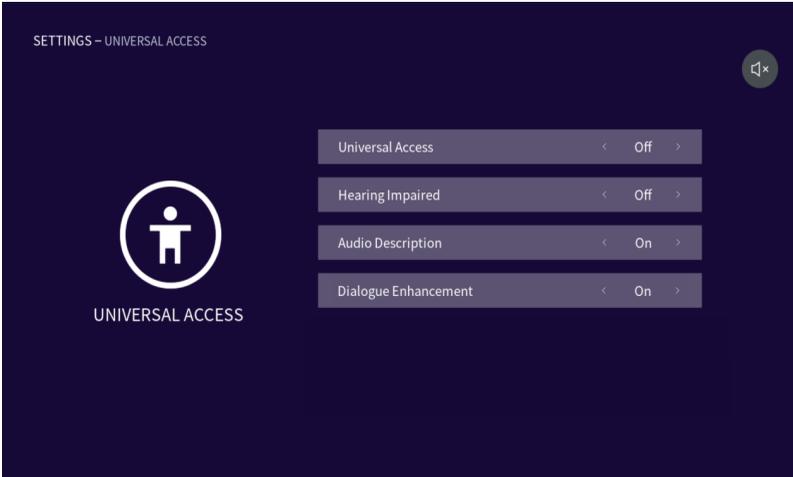


Function Description:

project	Support mode	Description
Universal Access	ON->OFF	Provide affordable telecommunications access to everyone
Hearing Impaired	ON->OFF	Hearing Impaired
Audio Description	ON->OFF	Audio Description
Dialogue Enhancement	ON->OFF	Dialogue Enhancement

LED COLOR TV

About TV

Press the [▲/▼] buttons to select an option, and press [OK] to confirm the selection.

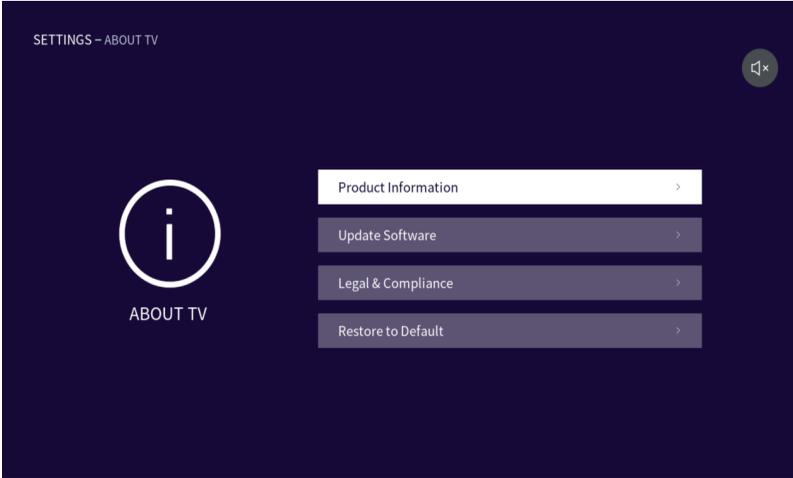

Function Description:

project	Description
Product Information	About this product information
Update Software	Update Software
Legal & Compliance	Legal dnd Compliance
Restore to Default	Restore to Default

LED COLOR TV


7. E quipment management

Entry method:

1. On the [home] page, click the  icon in the upper left corner to enter
2. Click the 'Soure' button on the remote control to enter the input source page, select the 'USB' option 
Select device



Document Classification

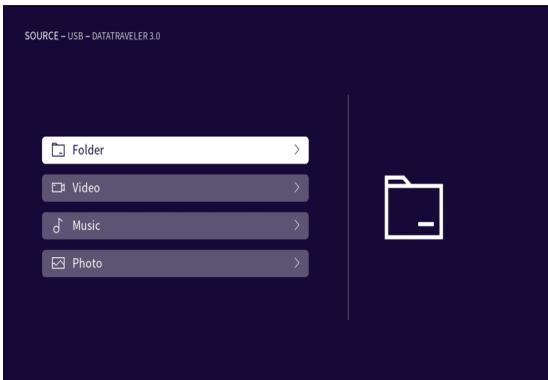

Folder

Press the [▲/▼] buttons to select an option, and press [OK] to view the content of the option.

LED COLOR TV

video

Click the video file to enter the video playback interface as shown below, press the [◀] and [▶] button to move the cursor, and perform different operations according to the prompts.




Icon Description:

Icon	Description
	fast retreat
	fast forward
	Previous Video
	Play or pause
	Next Video
	Playlist
	Play Order

LED COLOR TV

Music

Click the music file to enter the music playback interface as shown below. Press the [◀] and [▶] button to move the cursor and perform different operations according to the prompts.

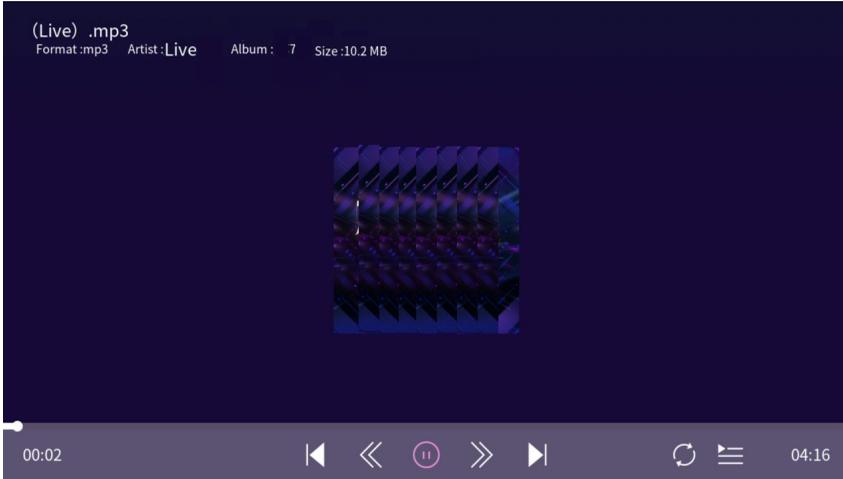

Icon Description:

Icon	Description
	fast retreat
	fast forward
	Previous picture
	Play or pause
	Next picture
	Playlist
	Play Order

LED COLOR TV

picture

Click the picture to enter the picture playback interface as shown below, press the [◀] and [▶] button to move the cursor, and perform different operations according to the prompts. The functions of the icons on the right side of the interface from top to bottom are: picture information, zoom out, zoom in, Picture setting.



Icon Description:

Icon	Description
	Rotate 90 degrees counterclockwise
	Rotate 90 degrees clockwise
	Previous picture
	Play or pause
	Next picture
	Zoom in
	Zoom out
	Play Order

LED COLOR TV

8. Technical Specification

Product Model	32WHA460E	
Screen Size	32" diagonal	
Aspect Ratio	16:9	
Power Supply	AC 100-240V~,50/60Hz	
Power Consumption	60W	
TV System	PAL B/G D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 option) (There is no DVB-C signal in some Countries or Areas.)	
Audio Output Power (Internal)	8Wx2	
Input Terminal	Antenna Input	x 2 (S2 option)
	USB Input	x 2
	HDMI Input	x 3
	VGA Input	NO
	PC AUDIO Input	NO
	Audio Input (L/R)	x 1
	Video Input	x 1
	YPbPr Input	NO
	RJ45 Input	x 1
	CI card In	x 1
	SCART In/Output	NO
	DC In (12V)	NO
	CARD SLOT	NO
Output Terminal	Earphone	x 1
	Audio Line Out(L/R)	NO
	Video Output	NO
	Optical	x 1
	Coaxial out	NO
Working Temperature	0°C~40°C	
Working Humidity	20% ~ 80% Non-condensing	

Note:the specification shown above may change without notice for quality improvement.

LED COLOR TV

9. Supported Signal Modes

A.HDMI Mode

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480p	31.468	59.94
576p	31.25	50.00
720p	45.00	60.00
1080i	33.75	60.00
1080p(1920x1080)	67.50	60.00

-When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.

-You can confirm the input signal format onscreen.

LED COLOR TV

10. Simple Troubleshooting

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on.(Power indicator does not light.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the signal line is connected properly. -Check that the power of the relevant peripherals is turned on. -Check that the Input option that has been selected matches with the input signal.
The remote control does not function properly.	-Check the batteries are not drained.(Use new batteries.) -Check that the remote control is within the operating range. -Check that the remote control is pointed to the remote control window on the display. -Check that there are no obstacles between the remote control and the remote control window.
Flashing spots or stripes appear on the screen.	-Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc. -For more information about video settings, refer to OSD Functions in Chapter 2.
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly. -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal. -For more information, refer to Supported Signal Modes in Chapter 4.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs